

HOW TO FIND THE SERIAL NUMBER OF THE AIR RECEIVER



NEXT TO VALVE HEAD



OR

ON RECEIVER BODY/ SUPPORTS

